
CHANNEL SETUP MODE

This transceiver allows you to reprogram each of the channels with different frequencies and QT (Quiet Talk)/ DQT (Digital Quiet Talk) settings. The table below lists the default channel settings.

| Channel Number | Table Number | Frequency (MHz) | Tone Number | QT/DQT Setting |
|----------------|--------------|-----------------|-------------|----------------|
| 1 | 1 | 446.00625 | 10 | 94.8 Hz |
| 2 | 8 | 446.09375 | 08 | 88.5 Hz |
| 3 | 3 | 446.03125 | 13 | 103.5 Hz |
| 4 | 6 | 446.06875 | 05 | 79.7 Hz |
| 5 | 4 | 446.04375 | 17 | 118.8 Hz |
| 6 | 2 | 446.01875 | 18 | 123.0 Hz |
| 7 | 7 | 446.08125 | 19 | 127.3 Hz |
| 8 | 5 | 446.05625 | 07 | 85.4 Hz |
| 9 | 1 | 446.00625 | 14 | 107.2 Hz |
| 10 | 8 | 446.09375 | 15 | 110.9 Hz |
| 11 | 3 | 446.03125 | 16 | 114.8 Hz |
| 12 | 6 | 446.06875 | 06 | 82.5 Hz |
| 13 | 4 | 446.04375 | 27 | D132N |
| 14 | 2 | 446.01875 | 28 | D155N |
| 15 | 5 | 446.05625 | 29 | D134N |
| 16 | 7 | 446.08125 | 30 | D243N |

Note: You must first select an operating frequency for a channel before you can select a QT/ DQT setting for that same channel.
